


FAQ - What if I'd like to have a telephone socket next to my bed and not by the TV position?

how to wire

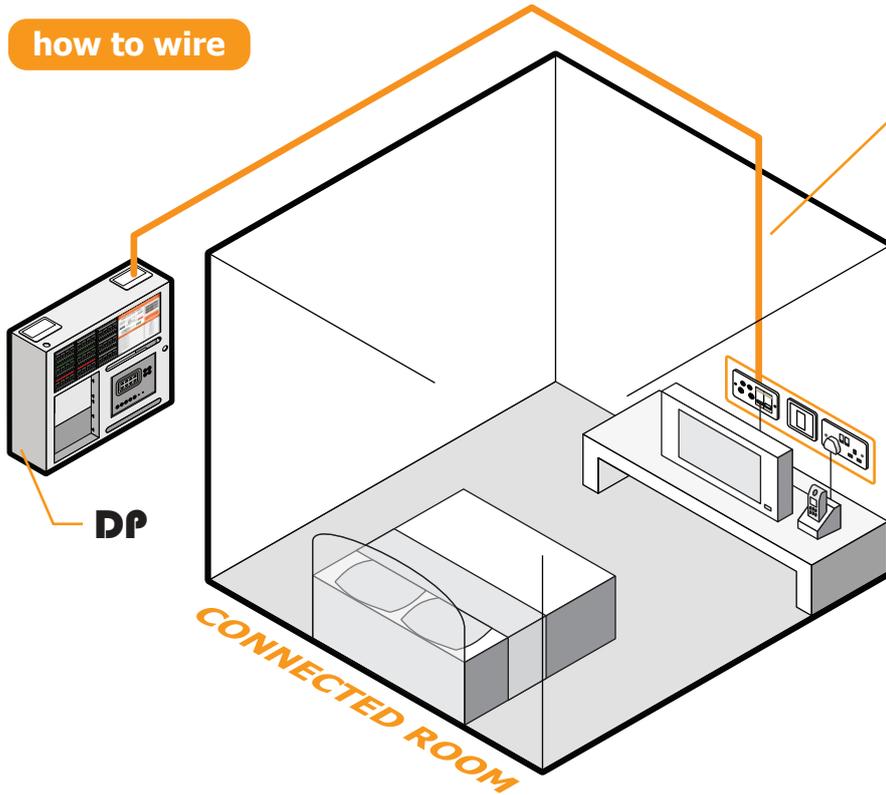


Digital Plumbers® Media Flex cable can be used to - this contains all the wires you need for the Room Media Socket.

We recommend you locate the Room Media Socket (which contains the telephone point) at the TV location. Run the cable as per the Builders Bible - you can use our Media Flex cable. A '2 into 1' telephone splitter can be used if you have both a set-top box and telephone, if you can't connect the phone to the rear of the set top box.

Why do we recommend this?


Most TV these days is digital, and most digital set-top boxes need a telephone connector, which we have put on the same socket. We have made a single cable that contains all the wires you need to do this. Our suggestion is to use a cordless telephone, with the basestation plugged into the telephone socket at the TV location, or on the back of the set-top box - or you can use a cordless phone and just plug this into a power socket by the bed.

connection diagram 1

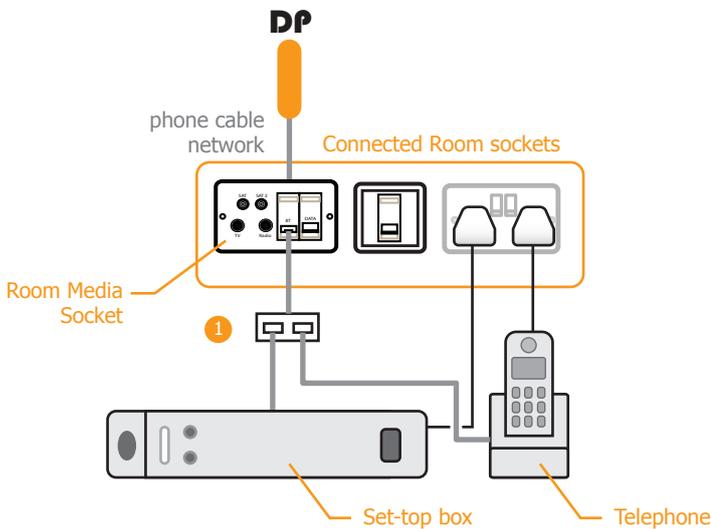

- 1 Use a '2 into 1' telephone splitter and connect both the phone and set-top box into it. Connect the '2 into 1' telephone splitter to the Room Media Socket phone module.

connection diagram 2

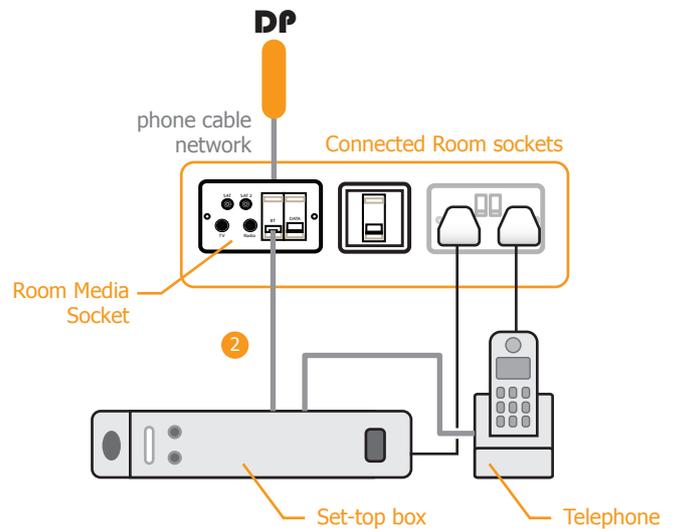

- 2 Plug the telephone into the set-top box, and connect the set-top box to the Room Media Socket phone module.



You could use a cordless phone & plug this into a vacant power socket by the bed.